



OPERATING INSTRUCTIONS HEATERS

READ FIRST

*Preliminary: Check that the wall thermostat is turned off
To RESTART your heater: - Open duct register in all rooms.
Turn on gas Supply meter and Power point.*

Electronic Ignition Models without Pilot.

**Models P12: P20: P25: P35 EA & ESS and J60EI:
J90 EI J120 EI: J150 EI: EX/RT 90-225 incl**

Turn the gas control valve to the **ON** position. (If fitted to your unit)

1. Turn the thermostat to the **OFF** position.
2. Turn the 240V AC power **on**, at power point, or three phase
3. Turn the thermostat to a setting **above** room temperature.
* Your Stadt heater should automatically turn on after approx 2 minutes

NOTE:

If the unit fails to light, remove the gas control access panel and observe the red indicator light. If the light is flashing, turn the **thermostat OFF** and depress the **reset** button for five seconds. The red indicator light will then stop flashing five seconds after the reset is released. Follow the lighting procedure to relight the unit.

If the system still fails to light, refer to the Service instructions, which are located on the unit, or contact ,on (03) 9800 2409.

Electronic Ignition Models with Pilot

**Models J60: J90: J120: J150: J180: J225
S60: S90: S120: S150: S180: S225
EX/RT 90-225 incl**

1. Turn the gas control valve to the **ON** position. (If fitted to your unit)
2. Turn the thermostat to the **OFF** position.
3. Turn the 240V AC power **on**, at power point
4. Turn the thermostat to a setting **above** room temperature.
* Your Stadt heater should automatically turn on after approx 2 minutes

NOTE:

If the unit fails to light. Repeat steps 2, 3, and 4, above. If the system still fails to light, refer to the Service instructions, which are located on the unit, or contact (03) 98002409.