



OPERATING INSTRUCTIONS HEATERS

READ FIRST

Preliminary: Turn OFF the wall thermostat and power to the heater unit. To RESTART your heater: - Open duct register in all rooms. Turn on gas Supply at the meter and unit

Pilot Models

- 1) Turn gas control knob to PILOT position, refer Fig. 1. Open pilot viewing Window, refer Fig.2.
- 2) Push gas control knob down fully and hold down to allow gas flow to pilot.
- 3) Continue to hold gas control knob down and press ignition button (if fitted) down fully to provide spark for ignition. If pilot does not light, press ignition button again. If no ignition button is fitted, apply a lighted match to the pilot burner, accessible through pilot viewing window.

WARNING: Do not use a gas lighter.

- 4) Once pilot is alight, continue to hold gas control knob down for Approximately 30 seconds before releasing.
- 5) Check that pilot flame is still alight with gas control knob released. If not, recommence lighting procedure. (Step 2)
- 6) Turn gas control knob to ON position.
- 7) Turn power (240 volts) on at power point.
- 8) Set wall thermostat (inside house) to desired temperature.(**above** room temperature)
- 9) Burner will light automatically from pilot flame soon after setting thermostat. Fan will operate some minutes later.

Important:

Should the heater fail to light at any time, check that the pilot flame is alight. If not, turn the gas control knob to the **OFF** position, wait five minutes for unburnt gas to clear, then repeat lighting procedure. If for any reason gas knob is jammed do NOT use any hand tool to unlock, as this could be very dangerous Ring **Service 98002409.**

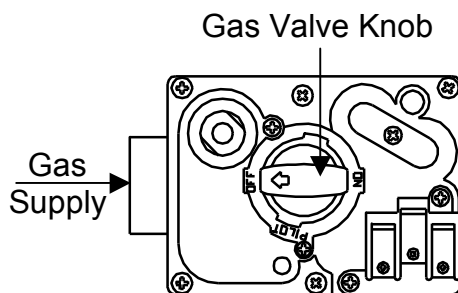


Fig. 1

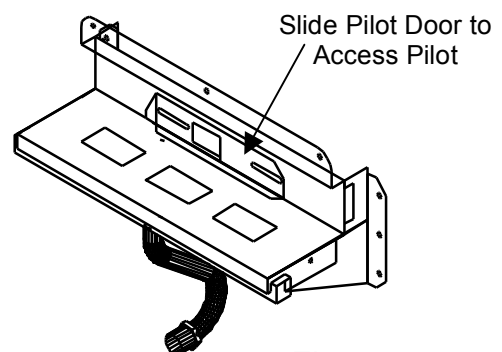


Fig. 2